 



Manual of instructions

Retro / Star3 / Toirán

pondus

 ● www.pondus.es

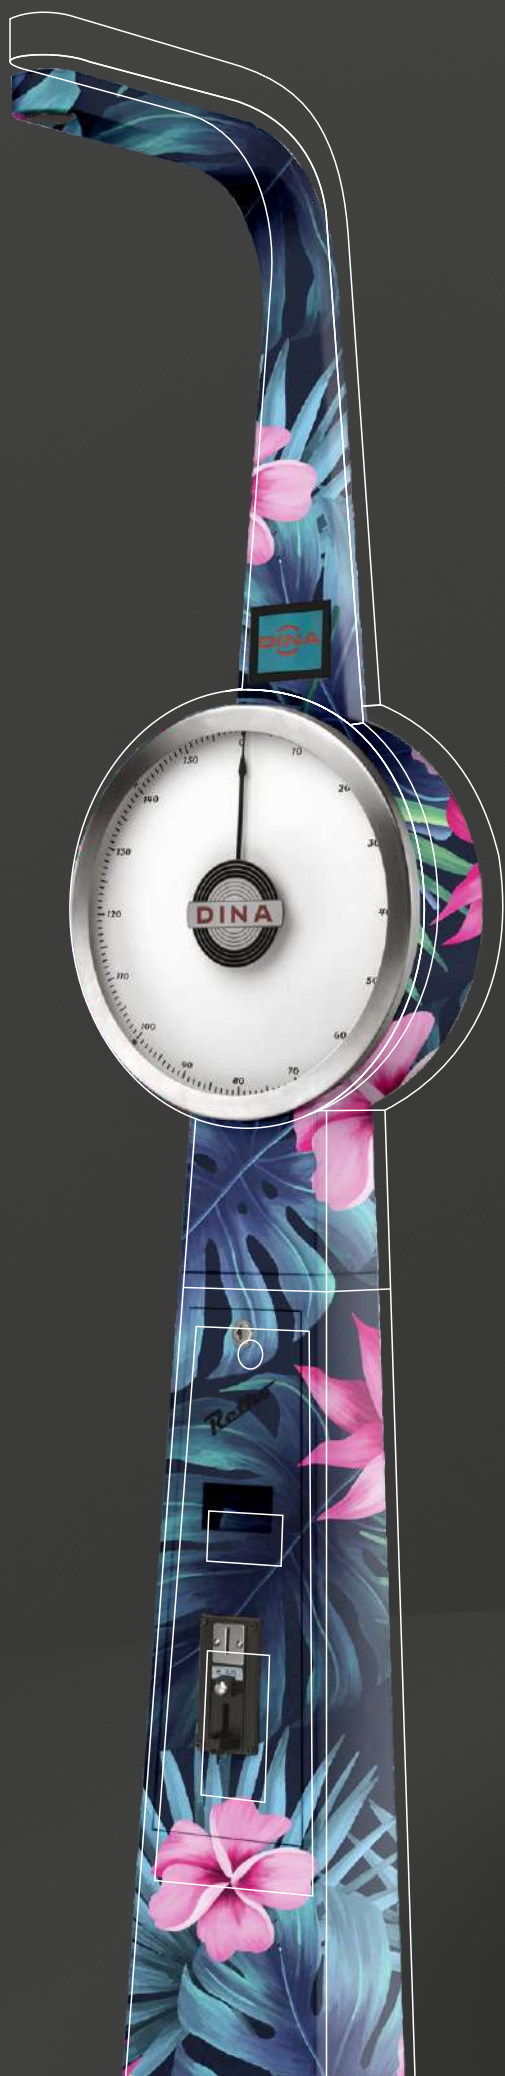

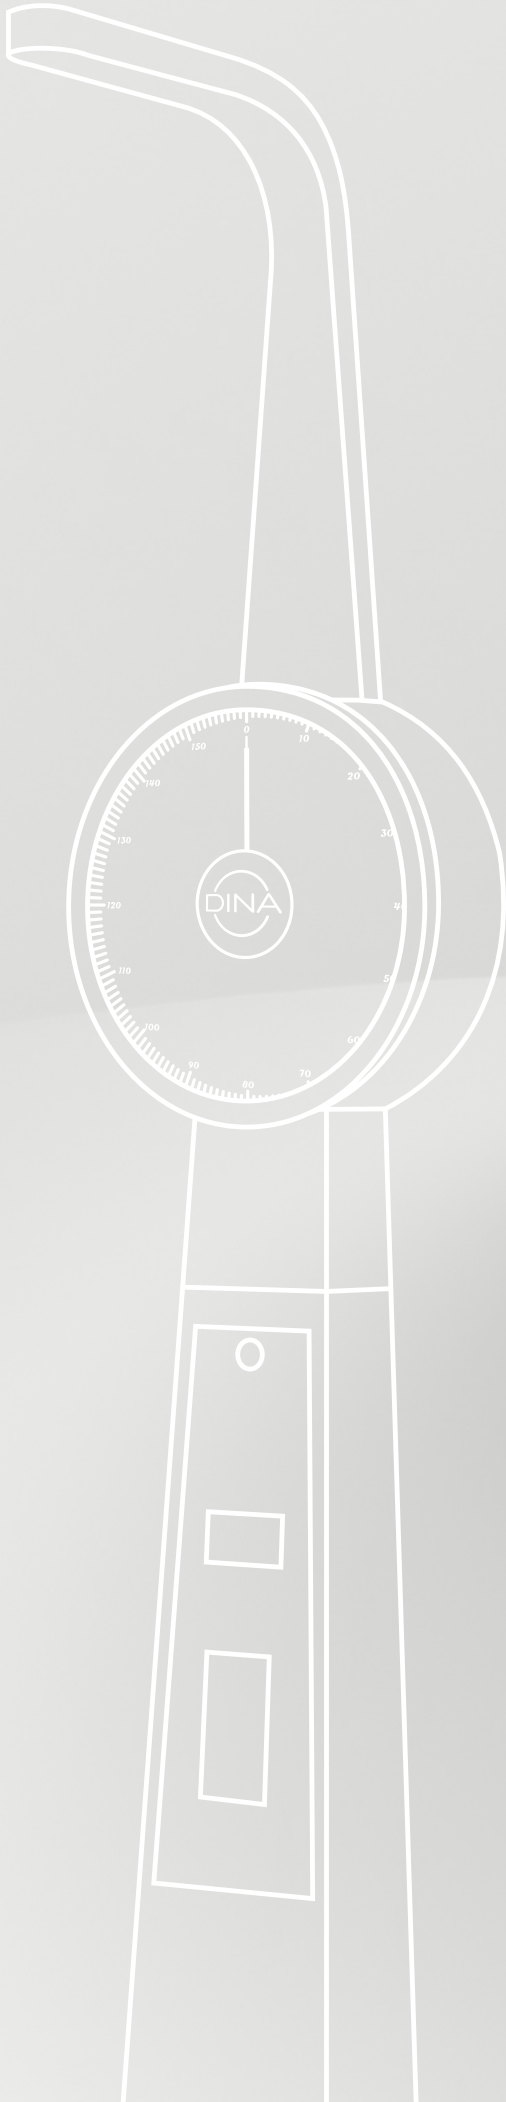

Index

- 1 Transport, reception and unpacking
- 2 Installation
 - Characteristics of the area to locate the machine
 - Maintenance and servicing
- 3 Start-up
- 4 Operation
- 5 Configuration menu
- 8 Features, accuracy and regulations

TRANSPORTING AND UNPACKING THE SCALE

Transport and handle the machine with great care.

Before unpacking the machine, it is necessary to make a visual inspection of the external condition of the machine. If the packaging shows signs of abuse, deformation or other defects, special attention should be paid to the internal condition of the product.

INSTALLATION

The equipment leaves the factory configured and calibrated and is ready for operation immediately after unpacking. A periodic check or calibration is not necessary. The installation technician will verify during installation that the calibration is correct.

- Characteristics of the area in which the machine is to be located

This equipment must be installed in covered premises, it cannot be subjected to external environmental conditions, dusty or humid environment, or electrical discharge fields. **It must be far from direct sources of heat**, sunlight, humidity, infrared radiation or other systems that emit heat energy. Likewise, it should not be placed near devices that emit electromagnetic interference such as automatic doors.

The floor area occupied by the machine should be a smooth, horizontal surface.

The conditions of use and storage must be:

Temperature: +5°C to +35°C.

Humidity: 30% to 75%.

Atmospheric pressure: 70 kPa to 106 kPa

It is advisable to leave a free space around it, to be able to easily access the disconnect switch, as well as to ensure the necessary ventilation, as well as the distance from the back to the wall should be at least 10 cm.

To ensure the stability of the equipment, adjust the feet of the machine so that it rests on its 4 legs.

Carefully place the upper part of the machine on top of the lower body by passing the cables through the opening and inserting the studs into the holes. Insert the enclosed screws and tighten them firmly with the Allen wrench until the 2 parts are fixed.

IMPORTANT:

DO NOT CONNECT THE EQUIPMENT TO THE MAINS BEFORE CONNECTING THE HOSES.

To ensure the user's safety due to possible electric shocks, it is compulsory to connect it to a socket provided with a protective earth, which in turn also guarantees protection against possible interferences.

MAINTENANCE

The only maintenance that can be carried out by unqualified personnel is the change of paper.

Do not carry out repairs yourself.

In case of malfunction, contact the Technical Assistance Service.

Pondus MGL S.L. is not responsible for the consequences derived from the non-compliance of the precautions described above, nor for possible modifications not authorized by the same, nor for the possible inadequate use of the product. torizadas por el mismo, ni del posible uso inadecuado del producto.

START-UP

Start the unit by pressing the switch at the bottom rear of the unit.

When the equipment is started up, the start-up message will appear briefly on the upper monitor, which will disappear immediately while the start-up process continues, which may last approximately 1 minute.

During this time the initial test of the equipment will be performed. During the initial test, the weight sensor is tared to 0. **It is therefore essential that when the equipment is started up there is no weight on the platform**, otherwise the zero level would not be calibrated correctly and the weight results would be erroneous.

At the end of these operations, the machine will go into display mode, showing images and information on the screens.

TURNING OFF THE EQUIPMENT

Turn off the equipment by actuating the switch located at the bottom of the back, where the power cord is located. No special precautions are necessary to turn off the equipment.



OPERATION OF THE SCALE

Payment for services will be made by inserting coins until the price of the required service is reached. **The exact amount of the service must be entered as the machine does not return change.**

The coin selector will not work if we have configured the equipment in free mode.

If more than the configured time elapses (between 3 and 15 seconds) and the credit required for the cheapest service has not been completed with coins, the credit is lost and returns to 0.

If it takes more than one minute to start the service, uploading to the platform, the service will be terminated and the accumulated credit will be lost and the main screen will be displayed.

WEIGHT AND SIZE

Once the service is started, the screen will display instructions on how to proceed to perform the service correctly. This message will be displayed indicating to go up to the platform. The weighing will start when it detects weight on the platform. If the weight is more than 10kg, once the weighing is finished it will also measure the height. During the weighing you will be able to see how it captures the weight and height data. At the end it will print the ticket with the results.

 
BABY WEIGHING

The baby weighing service is performed by first weighing the mother and then the mother with the baby in her arms and subtracting the weights. Select the PBB service with the icon that appears on the display **without going up to the platform.**

The adult must then step onto the platform and a tare will be performed. When indicated on the display, the adult must step off the platform, take the baby in his arms, and step on again, when indicated on the display. The equipment will wait for a maximum of 1 minute. It will then display the weight of the
The weight of the baby, which will also be printed on the ticket.

CONFIGURATION MENU

Pressing first on the upper right corner and then on the lower right corner, while the equipment is in display mode, a new screen will appear asking for a three-digit code to access the machine's settings and configuration menu.

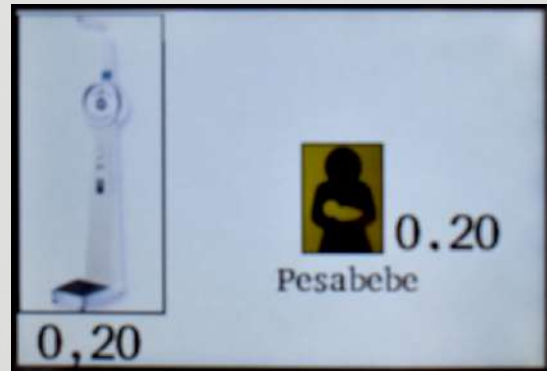

The access code to be entered is **256**, and press the OK key.

You will then access the configuration touch screen.

 


The following screen is displayed.



Clock / Calendar

Set the day and time of the system clock. Pressing the left arrow icon we move laterally through the data fields, with the (+) and (-) icons we increase or decrease their value and with the OK icon we confirm saving the changes.

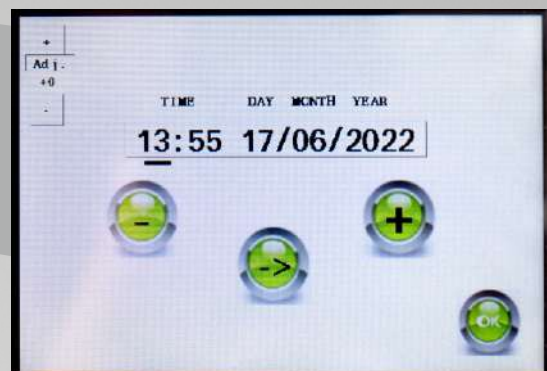

Language

Use the arrow key to scroll to the desired language and select it by confirming with the OK icon.



Beep

 
Select whether or not to have the scale beep to indicate that the process has been completed.



Total Collection

By clicking on this option, you will be able to see the accounting of the services. Clicking on the icon will print a ticket with the information.

If you click on the trash can icon, the partial will be deleted.

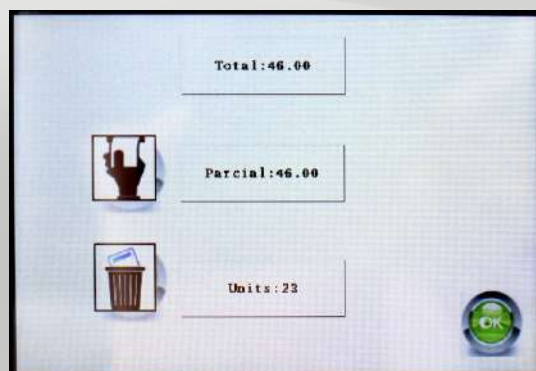


Price

To configure the desired price, we go up or down with the dates until we have the desired amount for each service. If you have PBB, you can choose the same or different price for it. We will confirm, as always, with OK.




Header and Footer

 
Allows you to write a personalized text to be printed on the header and footer of the ticket, both with 8 lines. Each with 24 characters.

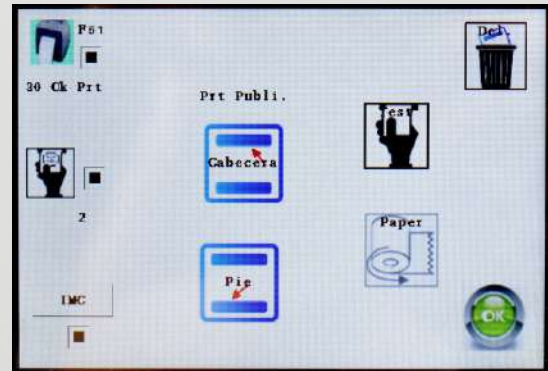

 To write, click on each selected line and use the keyboard that appears on the screen. When you enter the line, move the cursor to the point where you want to start typing with the DEL key. To keep the text centered, we have to take into account the 24 characters we have.

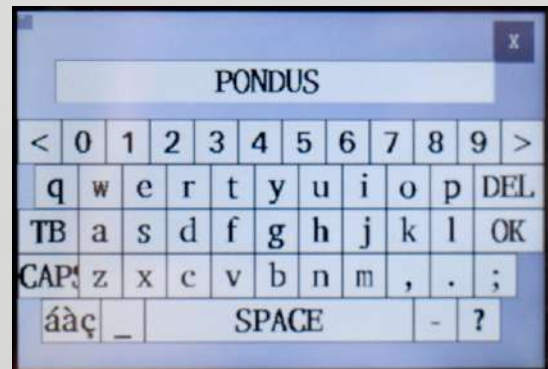

 With icon **(1)** you can choose among the 3 possible graphics to appear in the header of the ticket, before any text you choose (Cup with snake/Cross/PHARMACY).

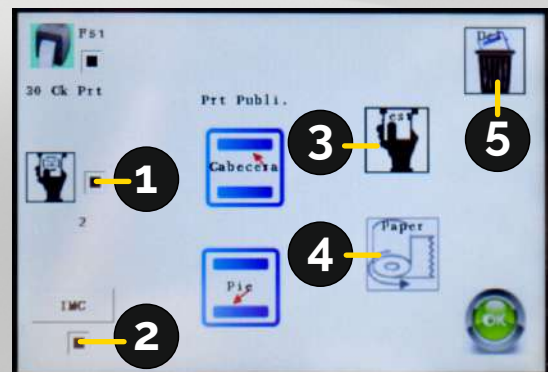

With **(2)** you can activate or deactivate the IMC to appear or not in the ticket.

With **(3)** you can print a test ticket.


With **(4)** you can make an advance of the paper. This will help you to place the paper correctly when changing the paper roll.

The **(5)** is to erase the data that we have put. The default data will appear again. Only the lines with added text will be printed, i.e. if the text is all in 4 lines, only 4 lines will be printed.

Display

You can enter a text of up to 24 characters that will appear while the machine is at rest.

By clicking on the weight icon, which is on the left side of the display, you can choose whether you want the user's weight to appear on the display when the machine is in use or not. In the case of disconnecting it, the weight will appear only in the ticket.

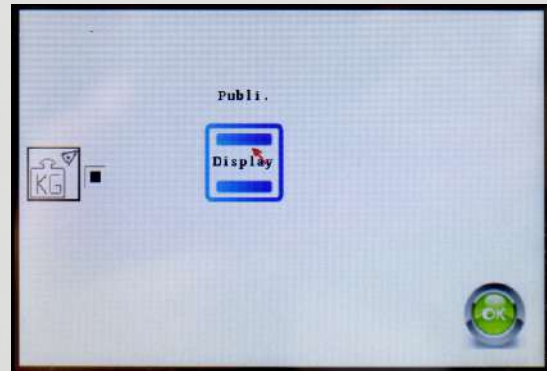 

6.- CHARACTERISTICS, ACCURACY, STANDARDS

Model: Retro/Star2/Star3

Manufacturer:

Pondus MGL S.L

C/ Emili Roca, 37 2^o-2^a 08016 Barcelona

Dimensions: 222cmts x 36cmts x 60cmts

Weight: 50 Kg

Consumption: 65W 100-260vac 50-60Hz

Monitor: 3.2" touchscreen display

Weight range: 0,030 - 150Kg

Weight accuracy: 13 grams

Weight accuracy: 11 grams

Height range: 20 - 190 cmt

Height accuracy: +/- 1cmt

Storage and use conditions:

Temperature: +15 °C to +35 °C

Humidity: 30% to 75%.

Atmospheric pressure: 700 kpa to 1060 kpar

Classification according to electrical safety

EN 60601-1

Continuous operation.

Bioelectrical Impedance Analyzer: Type BF

Protection against electrical overloads: Class I.

Protection against water ingress: Ordinary

Applicable Standards: EN 60601-1-2 (2007) / AC (2010)

EN 301 489-1 V1.9.2 (2011)

EN 301 489-17 V2.2.1 (2012)

Thank you for your trust!

Marta González López

Manager

marta.gonzalez@pondus.es

669 366 733

Jordi Nin Aregay

Commercial Director

jninaregay@gmail.com

616 526 064

pondus

 www.pondus.es 